

Legend

PAR = Parameters

ATT = Check components

COD = Adapting and coding/SCN

DTC = Diagnostic trouble code

DIAG = Available for diagnosis

For Four (454)

DESCRIZIONE	DIAG	DTC	PAR	ATT	COD/SCN
Instrument cluster					
ABS - Electronic Stability Program					
AB - Airbag - AIRBAG					
CDI - Common Rail Diesel - EDG					
Electrical Power Steering					
ESP - Electronic Stability Program					
Air conditioning					
ME - Electronic motor - ME					
Multifunction steering wheel					
SAM - SAM control Unit Version 1					
SAM - SAM control Unit Version 2					
Gataway Central ZGW					

For Two (450)

DESCRIZIONE	DIAG	DTC	PAR	ATT	COD/SCN
Instrument cluster					
Adaptive Brake System					
Airbag Serie 1					
Airbag Serie 2					
EDG Electronic motor Diesel - EDG					
Electrical Power Steering					
Electronic Stability Program (CanBus)					
Electronic Stability Program					
Electronic motor MEG Euro 2					
Electronic motor MEG Euro 2 BRABUS					
Electronic motor MEG Euro 3					
Electronic motor MEG Euro 3 BRABUS					
Electronic motor MEG Euro 4					
Electronic motor MEG Euro 4 BRABUS					
Zentral Gateway 4					
Zentral Gateway 2					
Zentral Gateway 3					
Zentral Gateway					

For Two (451)

DESCRIZIONE	DIAG	DTC	PAR	ATT	COD/SCN
Instrument cluster					
AB - Airbag - AIRBAG					
CDI - Common Rail Diesel - CDI					
Electrical Power Steering					
ESP - Electronic Stability Program - ESP					
Air conditioning					
ME - Electronic motor - ME					
Starter					
Gateway Central					
Sprintshift module					

Roadster (452)

DESCRIZIONE	DIAG	DTC	PAR	ATT	COD/SCN
AE - Restraint system - AE					
EPS control unit					
ESP - Electronic Stability Program - ESP					
Instrument cluster					
MEG - Motor electronics					
MEG - Motor electronics BRABUS					
Central gateway SAM					